


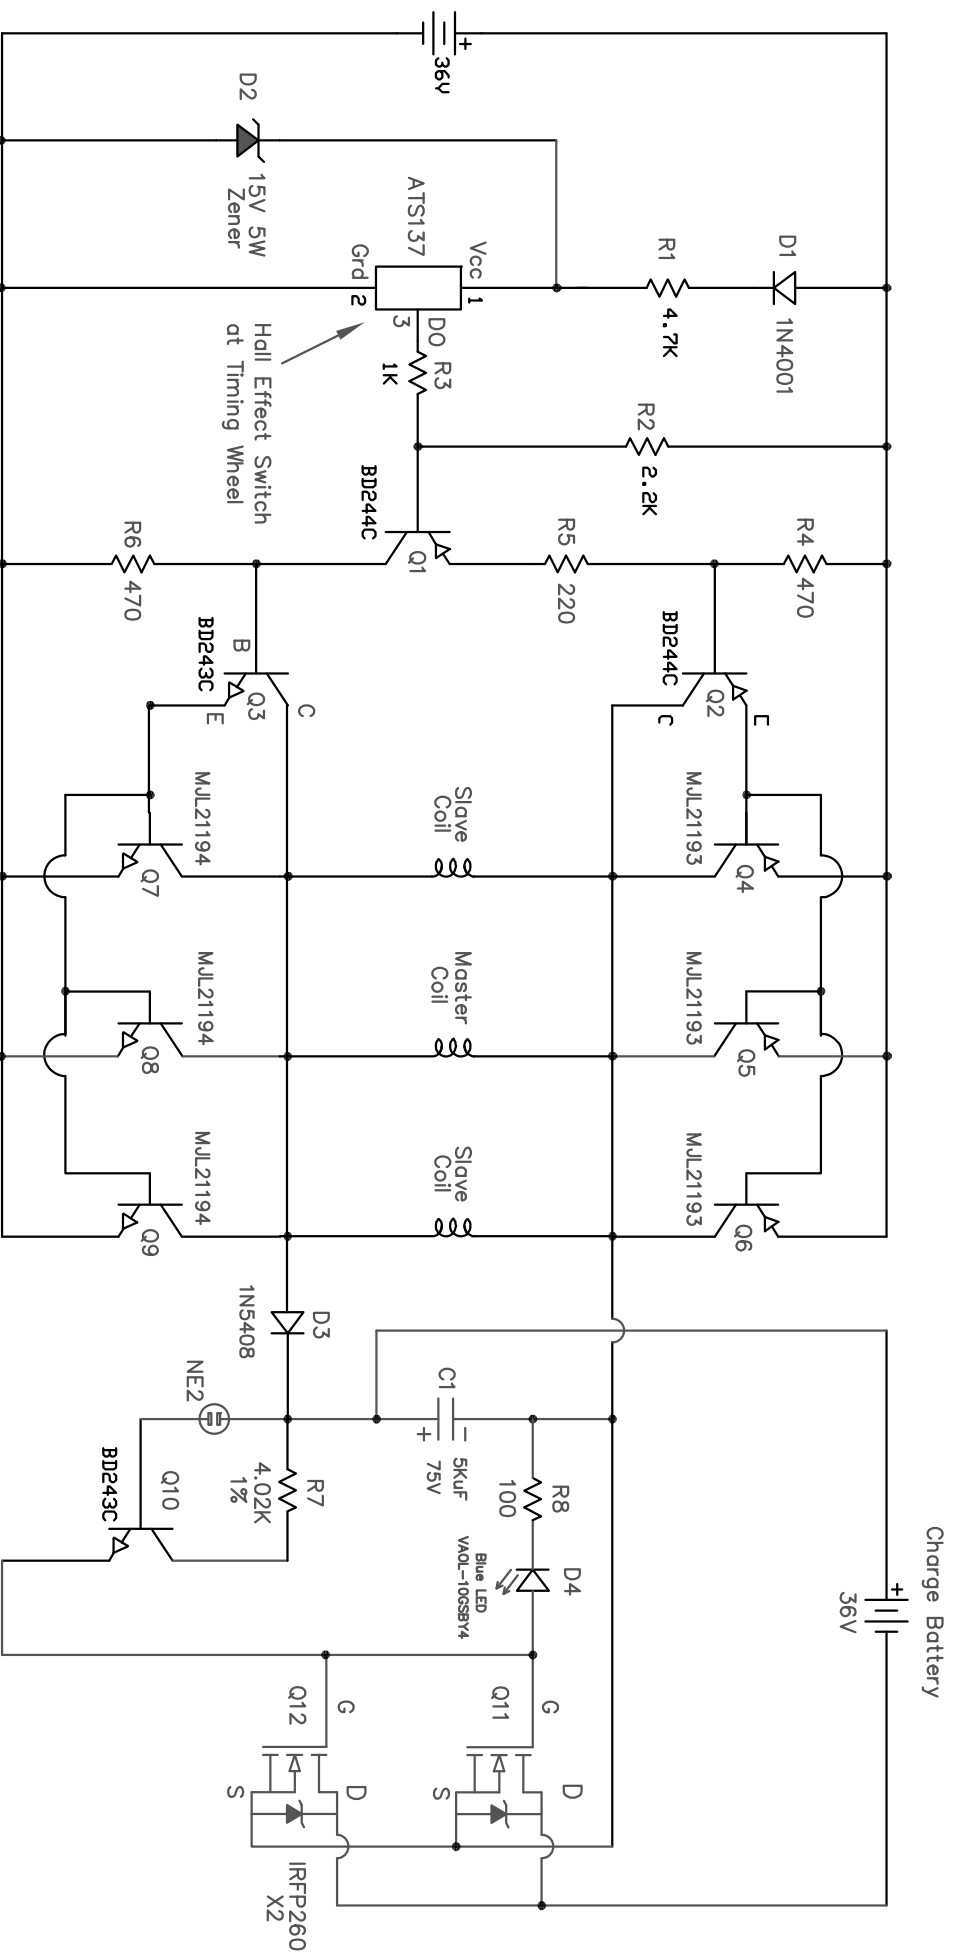

- Notes:
1. Use a very large heatsink with FET's.
 2. C1 size will depend on how much energy the coils produce and how long the cap takes to reach 70-75 volts before dumping.

Modified Bedini/Cole Circuit and Cap Dump
With NE2 Trigger

Ron Chase

4-3-12

REV A